
EMPLOYING AUTO ZERO FUNCTION

Purpose

Detail auto zero procedure for STI pressure transmitters with magnetic zero option.

Procedure

To zero out pressure transmitter proceed with the following steps:

1. Power down pressure transmitter.
2. Expose pressure element to ambient pressure.
3. Insert magnet tool*.
4. Power up transmitter.
5. Wait 3 seconds.
6. Remove magnet.
7. Confirm zero.

*STI P/N: 218839

